 


WEEFINE

WFH TG-6

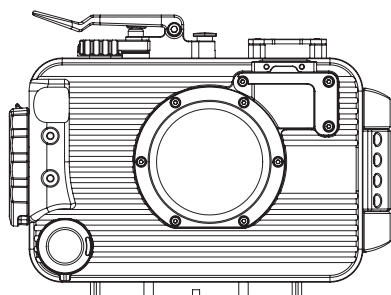 


Waterproof Case


USER'S GUIDE

Please read the manually carefully before using the case

IDENTIFICATION OF PARTS

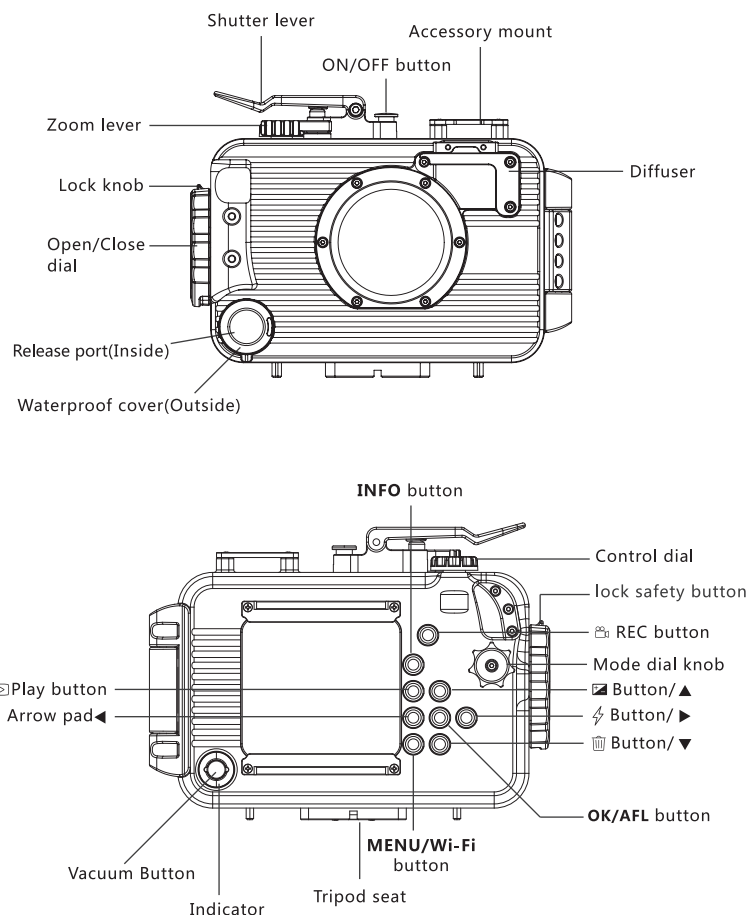

PACKAGE CONTENTS

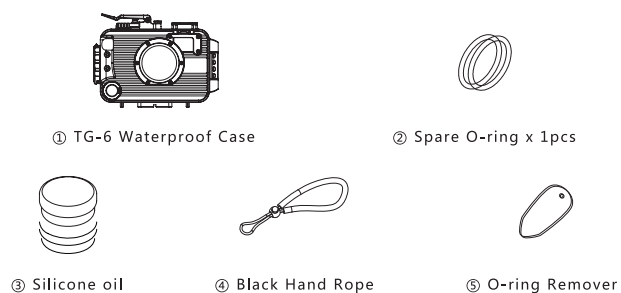 


SPECIFICATIONS

| | |
|--------------------|----------------------------------|
| Housing body | Aluminium alloy |
| Surface treatment | Hard anodised |
| Display window | Abrasion resistant polycarbonate |
| Dimensions | 161.4mm*74.2mm**121.2mm |
| Weight | 685g (land) |
| Buoyancy | Slightly negative |
| Depth rating | 100 metres |
| Compatible cameras | Olympus Tough TG-5/TG-6 |


OPENING AND LOCKING THE CASE

 To open the case:

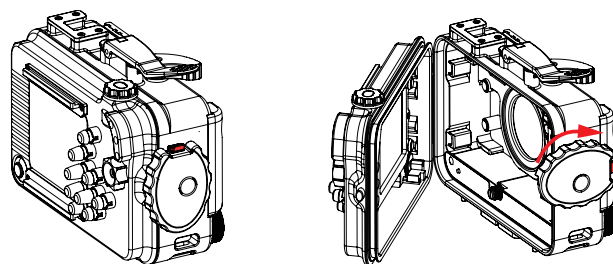

1. Press the case lock safety button.
2. Turn the housing lock clockwise for 90°, until the lock reaches the "Open" position as shown .

 To lock the case:

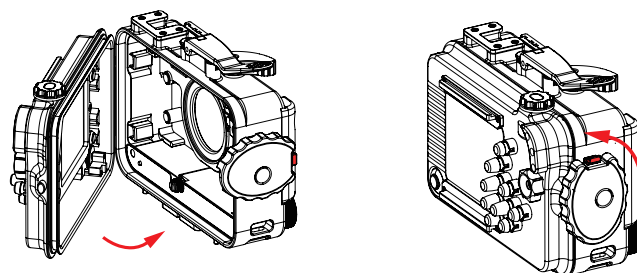

1. Close the case while the housing is in the "Open" position.
2. Turn the case lock anti-clockwise for 90°, until the lock reaches the "lock" position as shown.

ADVANCE CHECK OF THE CASE

1. Advance check before use

This Case has been the subject of thorough quality control for the parts during the manufacturing process and thorough function inspections during the assembly. In addition, a water pressure test is performed with water pressure tester for all products to confirm that the performance conforms to the specifications.

However, depending on the carrying and storage conditions, the maintenance status, etc., the waterproof function may be damaged, Before using, always perform the following advance checks.

*** A water-tight test without the camera inside the housing is highly recommended**

• Using the vacuum system

1.before use ,Open the waterproof cover and then press the vacuum system switch for air extraction,When the indicator will flash alternately from red to green,The green light will be on normally,which means the pumping is completed,Then close the waterproof cover tightly,

2.If the indicator light remains green after 30 minutes, you are safe to dive.

 
- The red light is always on before pumping
- The red and green lights flicker alternately during pumping
- The green light is normally on after pumping

3.After pumping , if the red and green flashing state appears again , it shows bad sealing of the waterproof case , and should be checked to use.

4.After use, before opening the waterproof case, it is necessary to unscrew the waterproof cover and press the exhaust valve to open the waterproof case with air injection.

CAUTION:

If the advance test shows water leakage with normal handling, stop using the Case and contact your dealer.

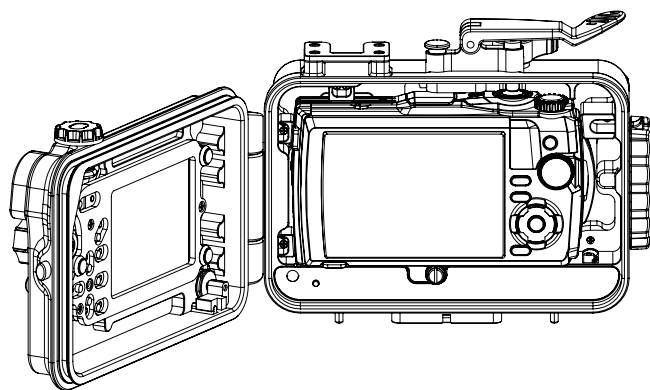

1. Place the camera inside the case as shown.
2. Close the housing and confirm that all the controls of the housing are correctly engaged.

GENERAL WARNINGS AND INSTRUCTIONS

- * Do not disassemble the case.
- * Do not leave the case exposed to a heat source or store it in a high temperature location. (e.g., in a locked car parked in the sun)
- * Remove the battery if the case will not be used for long periods of time. (e.g., between dive trips)
- * To avoid leaks the O-rings should be checked to ensure that they are free from any dirt, sand, hair and dust every time before you open and close the case. Use a soft cloth to the O-rings if required. The O-rings should also be carefully checked for cracks or blemishes. Gently and evenly apply a thin coat of grease to the entire O-rings regularly to prolong O-ring life. Be care not to scratch the O-rings surface. If cracks or blemishes occur, the rings should be replaced immediately.

CHECK THE DIGITAL CAMERA

Check the digital camera before loading it in the Case.

1.Battery Confirmation

The flash is used very frequently during underwater shooting. Before diving, make sure that you have enough remaining battery power.

2.Confirmation of the remaining number of pictures to be taken.


Confirm that the image storage has sufficient remaining number of pictures to be taken.

3.Remove the hand strap from the digital camera.

When a digital camera is loaded without removing the strap, the strap get caught between the Case lids and may cause water leakage.

4.Remove the lens ring from the digital camera then put it into the underwater housing.

 TO INSTALL THE CAMERA INTO THE CASE

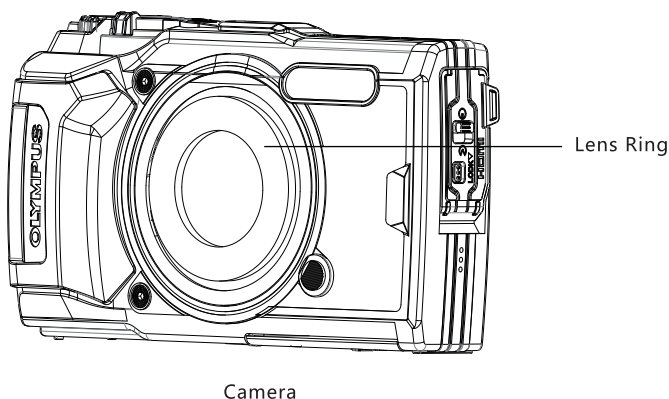

**** The camera lens ring must be removed before installing the case**

- * Do not open the case when using in the water.
- * Wash the exterior of the case thoroughly with clean fresh water immediately after use. Soaking the case in fresh water will help to remove salt deposits prior to storage.
- * Please remove all water before opening the case. Allowing water to come in contact with the internal device may cause damage to the case.
- * Do not disassemble, modify, remanufacture, puncture or damage the case

 
WARRANTY

The dealers provides a warranty against manufacturer defects for 1 year starting from the date of purchase. Manufacturer defects occurring within 15 days of the date of purchase will result in an exchange of product at the vendor. All other manufacturer defects occurring within 1 year of the purchase will be repaired at no cost. Proof of purchase is required for warranty support.

The warranty does not cover failures or defects resulting from misuse (e.g; modification; damage), natural disasters, or battery issues, including incorrect battery installation.

WEEFINE


WFH TG-6

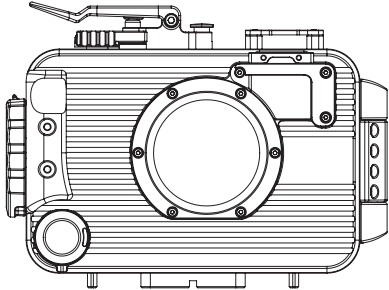

防水壳 使用说明书


使用前请详细阅读说明书

 组件

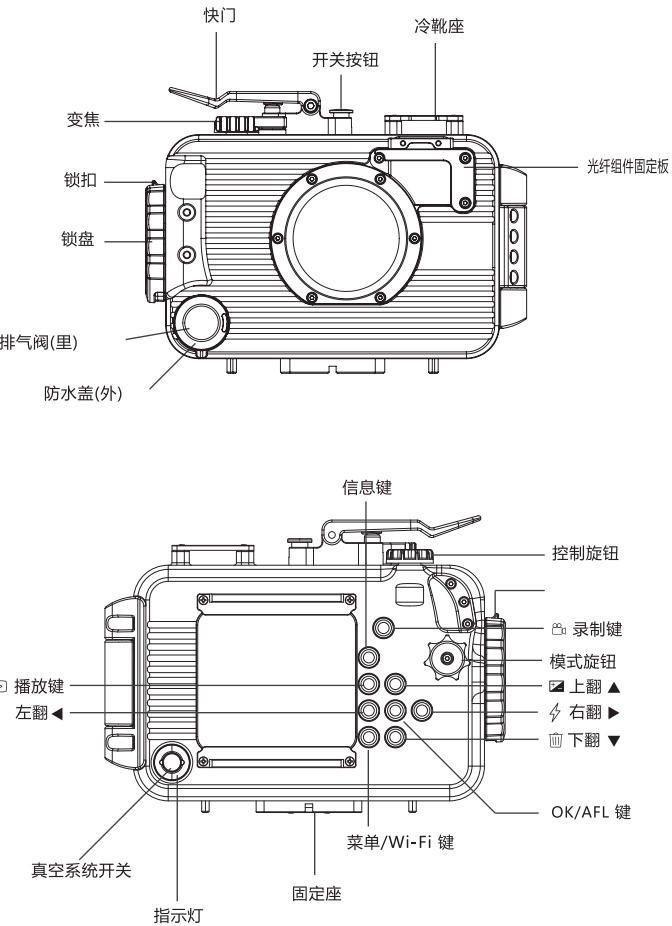

①

 包装

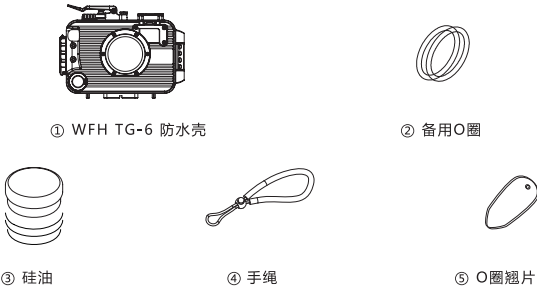


规格

| | |
|------|------------------------|
| 材质 | 铝合金 |
| 表面处理 | 阳极氧化 |
| 显示窗口 | 耐磨聚碳酸酯 |
| 尺寸 | 161.4毫米*74.2毫米*121.2毫米 |
| 重量 | 685g (陆地) |
| 浮力 | 略负 |
| 防水深度 | 100 米 |
| 适用相机 | 奥林巴斯 TG-5/TG-6 |

②


打开和关闭防水壳

 打开防水壳:

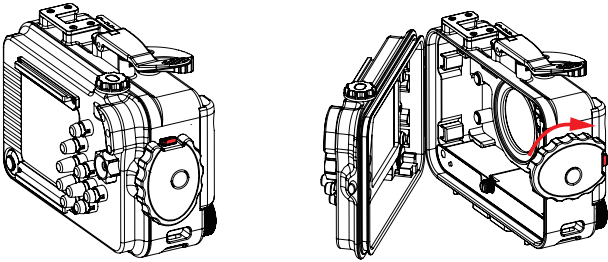

1. 按下防水壳锁扣
2. 将锁盘顺时针旋转90°到达能打开的位置即可

 关闭防水壳:

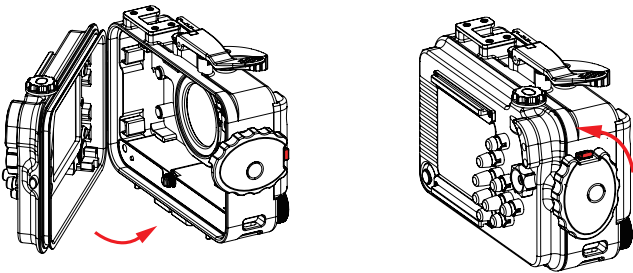

1. 对准锁盘缺口位置关上防水壳
2. 将锁盘逆时针旋转90°到锁紧位置即可

③

检查防水壳

1. 使用前检查

本产品在生产过程中对部件质量控制严格要求，并在装配过程中进行彻底的功能检测

。此外，还对所有产品进行水压试验，以确定其性能是否符合规范。

由于搬运和储存条件，维护状态等，防水功能可能会损坏，在使用前，一定要执行以下预检。

* 强烈建议在没有装入相机的防水壳进行防水测试

◆ 漏水功能检测

1.使用前，应拧开抽气孔防水盖，然后按下真空系统开关，进行抽气。抽气时指示灯会**红灯~绿灯** 交替闪烁，绿灯常亮，代表抽气完成；然后盖紧防水盖。

2.将防水壳静置于陆地上30分钟，30分钟过后，此时漏水检测指示灯**亮绿灯**则为密封良好，方可下水使用。

● 抽气前红灯为常亮状态

 
● 抽气时红绿灯交替闪烁状态

● 抽气完成绿灯为常亮状态

3.抽气完成后，若再出现红绿交替闪烁状态，则表示防水壳密封性差，须检查排除后才能使用

4.使用后，打开防水壳前，需拧开防水盖，按下排气阀，注入气体方能打开防水壳。

注意：
如果按正常操作测试显示漏水情况，请停止使用防水壳并联系经销商。

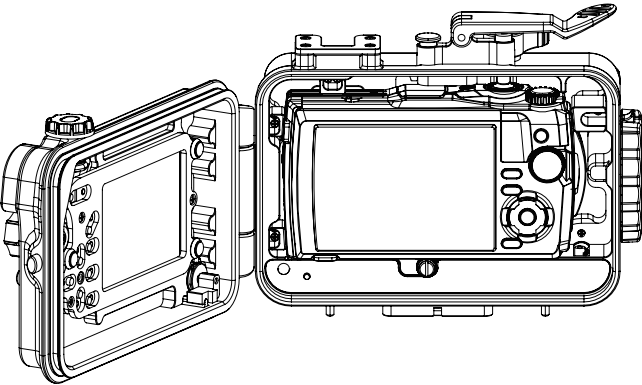

1. 如图所示，将相机放入防水壳内。
2. 关闭防水壳并确认外壳的所有控制装置都正确使用。

产品安全及产品信息须知

- * 请勿自行拆卸本防水壳，避免人为拆卸导致损坏不能进行维修。
- * 不要将防水壳长期放置于阳光直射处或者高温环境下。
- * 长时间不使用本防水壳时，请及时将电池取出，存放于干燥阴凉处。
- * 在使用本产品前必须仔细检查密封圈，确保密封圈无破损，无砂子等杂物附在密封圈上。防水圈拆下清洗时，请使用附件中的拆除翘片，不能用锋利的工具操作，以免损坏密封圈，勿使用有机溶液，避免密封圈老化、变形。
- * 务必使用原厂润滑油及原厂密封圈。
- * 水下使用时，不能打开防水壳。

检查数码相机

装进防水壳前请务必检查数码相机

1.确认电池

闪光在水下摄影经常使用到。

在潜水之前，确保给电池充满电。

2.确认数码相机内存量.

 
确保相机储存照片张数量足够

3.从数码相机上取下手带。

如果数码相机没有移除手带的情况下被加载时，手带可能会被夹在相机缝隙之间，并可能导致漏水。

4.取下数码相机镜头环，然后将其装在防水壳外。

安装相机

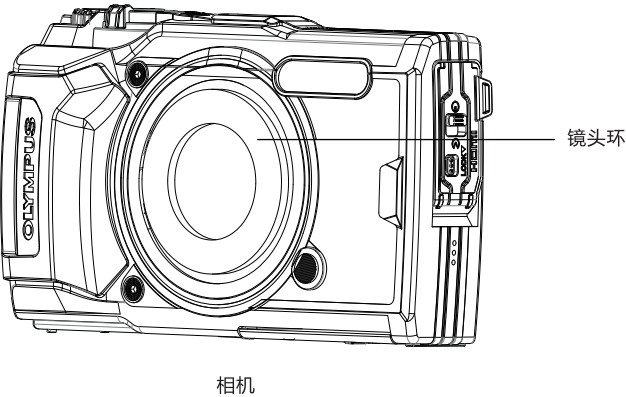

** 相机装入防水壳前，必须取下相机镜头环

* 使用离开水面后，请务必将防水壳表面的水擦拭去除干净后才可打开，避免防水壳上的水珠进入内部损坏内部零件。

* 使用完毕后，请务必将防水壳置于淡水中摇晃清洗并浸泡30分钟时间，以便于清除掉附在潜水记录仪上的盐分及杂质，避免防水壳上的金属零件被腐蚀生锈。如因使用后未清洗导致零件生锈，影响防水功能以致漏水，维修费用必须由用户承担。

保修

自购买日起1年内，我们对制造商的缺陷提供保修；自购买日期后15天内发生的制造商缺陷导致卖方产品的交换和所有其他制造商在采购1年内出现的缺陷将免费维修。购买证明需要保证支持。

保修不包括因使用不当而导致的故障或缺陷（例如：修改；损坏），自然灾害，或电池问题，包括不正确的电池安装。