



WEEFINE


WFA51真空检测器说明书

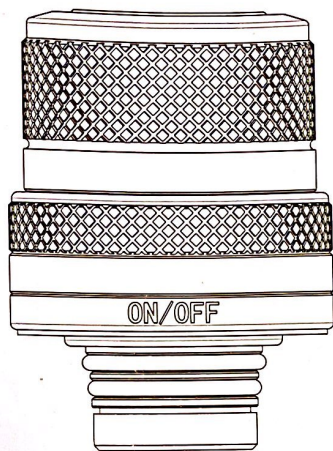

使用前请详细阅读说明书

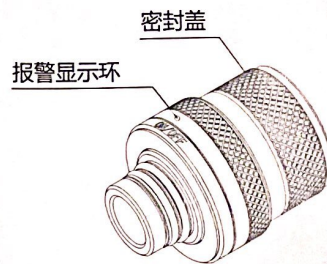

包装

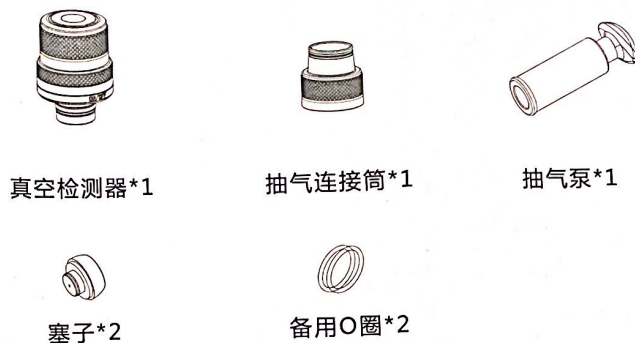


01

电池安装


1. 逆时针转动打开密封盖。
2. 将纽扣电池放入电池仓内。
3. 顺时针转动密封盖拧紧。

注意：电池正负极方向

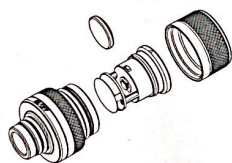


操作

开机/关机：
拧开真空检测器密封盖，用密封盖顶面触碰机身镭射ON/OFF位置一次开机，显示环红闪；再一次触碰关机（红闪熄灭）

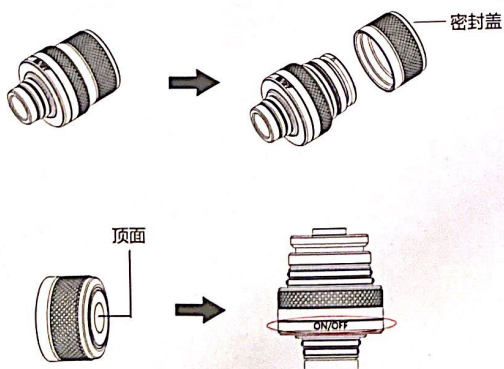

漏水功能检查：
将真空检测器装到防水壳上，安装抽气连接筒后，再装上塞子用抽气泵进行抽气；

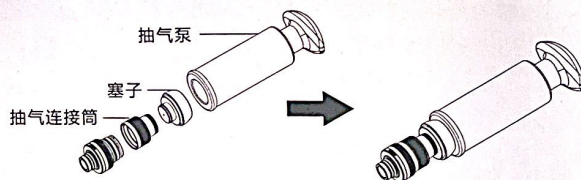

抽气时报警显示环会 红灯~绿灯 交替闪烁，当绿灯闪烁时可停止抽气，拔出抽气泵接头并盖回真空检测器的密封盖。


- 抽气前（漏气或没抽气）红灯为闪烁状态
- 抽气时红绿灯交替闪烁状态
- 抽气完成绿灯为闪烁状态



02

03


WFA51 Vacuum Detection System Manual

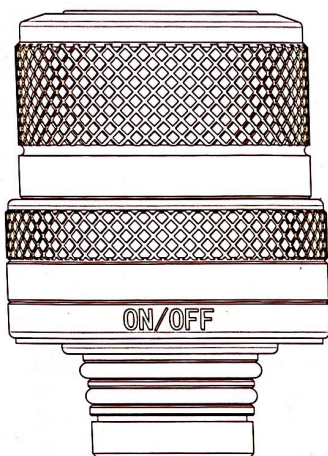

Please read the manual carefully before using the video light

To install the battery


1. Turn the sealed cap counter-clockwise to open.
2. Loading the Button batteries into the Battery compartments (Notice the positive and negative)
3. Turn the sealed cap clockwise to reattach the Vacuum detection system.

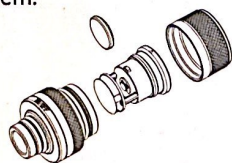


Operating Instructions

Turn ON / Turn OFF :


Open the Vacuum detection system, Touch the laser ON/OFF position of it with the top of the sealed cap, and the red flash of the ring will be ON, Touch again it will be OFF (red flash off)

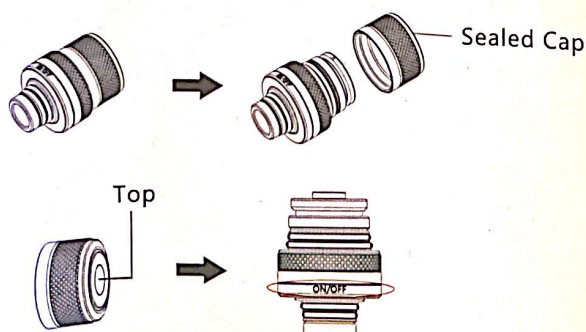

Component

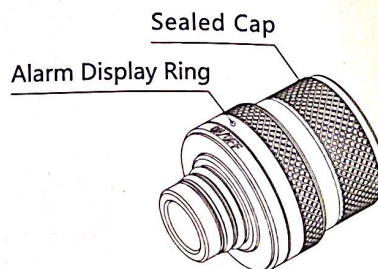


Unpacking

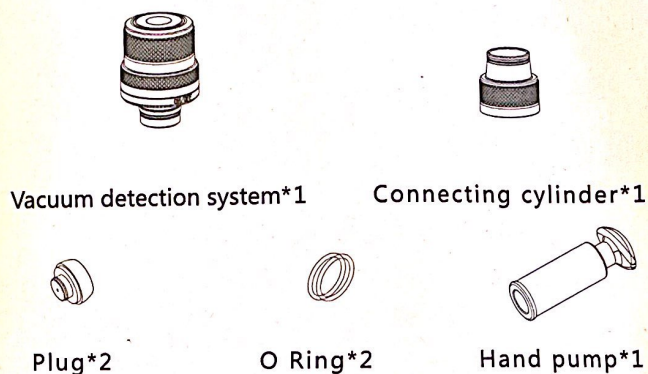

Using the vacuum system :

- Install the Vacuum detection system on the waterproof shell, install The connecting cylinder, and then install the plug and use the hand pump for suction;

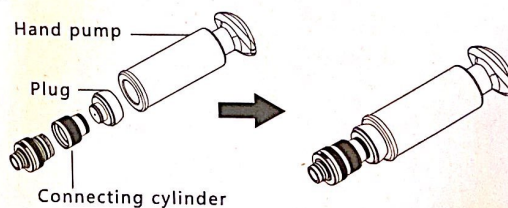

- When pumping, the alarm display ring will flicker red and green lights alternately,
- Stop pumping when the green light flashes, pull out the pump connection and cover the sealed cap of the Vacuum detection system.

- Before pumping (air leakage or no pumping), the red light is flashing
- Red and green lights flicker alternately when pumping
- The green light after pumping is flashing

