




2602.3 GoPro Mount Kit for Quick Release Handle


Assembly Instructions

1. Apply a thin film of lubricant to attachment points as shown below.
2. Press each component together.

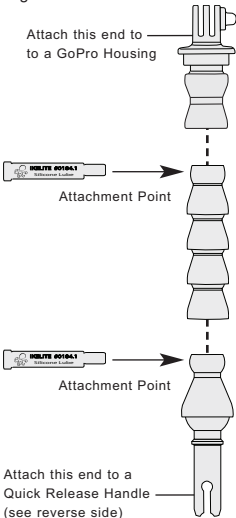

Attach Assembled Kit to Handle

1. Depress Handle Push Button.
2. Insert Stem Mount in Handle.
3. Release Push Button. Push Button should return to starting position when assembled kit is properly attached.

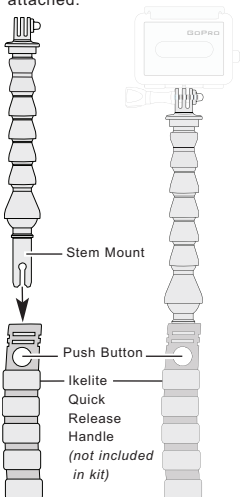

Ikelite Underwater Systems
50 West 33rd Street
Indianapolis, IN 46208 USA
www.ikelite.com

© 2013 Ikelite Underwater Systems

2602.3_GoPro_Mnt_Kit_Rel_Han_01-1113